

HOTLINE SYSTEM MODEL HT-1



- 1) Connect link of the phone's to the CONTROLLER UNIT.
- 2) Connect 220 V AC mains input to the CONTROLLER unit.
- 3) Switch on the supply to the unit.
- 4) System has got continuous online UPS battery backup for power Failures.

OPERATIONS: -

OUT GOING CALLS:-

- 1) Lifting the receiver of any phone will activate the ringer of other phone's.
- 2) Replacing the receiver on cradle disconnects the call.
- 3) On pick up by other party the communication is in private mode.

INCOMING CALLS:-

- 1) The ringer energized after the handset of any phone is lifted and the ringer will be heard.
- 2) To communicate lift the handset and talk.
- 3) In case nobody picks up the phone and caller party disconnects the call, the phone will get disconnected automatically.

INDUSTRIAL COMMUNICATIONS SIMPLIFIED.

Cables & Wireless co.

FF 75 RAJAT ARCADE, MIDC T-POINT, AMRAWATI ROAD, WADI, NAGPUR -440023.MAHARASHTRA,INDIA. PHONE:-+917104-321913, +917104-224381

E:-+917104-321913, +917104-224381 FAX:- +917104-224381.

Cell: - +9198226 95746, +919225227945, +919822941190.

Website:- www.cnwcom.in.

E-mail: -cnwcom@gmail.com.

"(Specifications and description subjected to change without prior notice)"